













1 LED 	<p>The battery needs charging or there is a bad connection to the battery. Check the connections to the battery. If the connections are good, try charging the battery.</p>
2 LED 	<p>The left hand motor* has a bad connection. Check the connections to the left hand motor.</p>
3 LED 	<p>The left hand motor* has a short circuit to a battery connection. Contact your service agent.</p>
4 LED 	<p>The right hand motor* has a bad connection. Check the connections to the right hand motor.</p>
5 LED 	<p>The right hand motor* has a short circuit to a battery connection. Contact your service agent.</p>
6 LED 	<p>The wheelchair is being prevented from driving by an external signal. The exact cause will depend on the type of wheelchair you have.</p>
7 LED 	<p>A joystick fault is indicated. Make sure that the joystick is in the center position before switching on the control system.</p>
8 LED 	<p>A possible control system fault is indicated. Make sure that all connections are secure.</p>
9 LED 	<p>The parking brakes have a bad connection. Check the parking brake and motor connections. Make sure the control system connections are secure.</p>
10 LED 	<p>An excessive voltage has been applied to the control system. This is usually caused by a poor battery connection. Check the battery connections.</p>
7 LED+ S 	<p>A communication fault is indicated. Make sure that the joystick cable is securely connected and not damaged.</p>
Actuator Flash 	<p>An Actuator trip is indicated. If more than one actuator is fitted, check which actuator is not working correctly. Check the actuator wiring.</p>